


Docking station for dispense heads ACCESSORY

Safe and clean storage unit for dispense and fill heads during container change

Prevents contamination of the dispense head and risk of contact for the operator, as all wetted parts are completely sealed inside the docking station.

FEATURES

- The station can easily be mounted on any wall
- Storage shelf for drum wrench and dip tube closures
- Enables flushing of the dispense / fill head and the system line or connection to a drain
- Collection bottle included
- Customized versions with an additional flushing port or a hook for hanging the docking station directly onto the drum/IBC are available upon request.

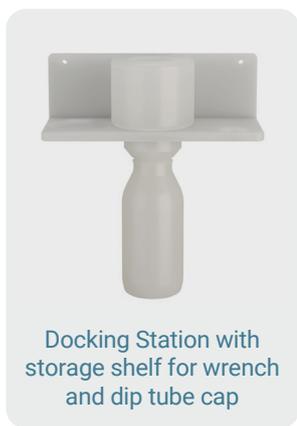

Docking Station with storage shelf for wrench and dip tube cap



Space saver Docking Stations for tight spaces



Two space saver Docking Stations next to each other



Docking Station with QC3 Dispense Head



Electrically conductive Docking Station



Flushing the system line

The dispense and fill heads are fully sealed within the docking station. The entire system can be flushed via the flushing connection at the bottom. This connection can also be used to connect the docking station to a drain.

Note: The bottle can easily be removed to access the Flare 1/2" flushing connection.

Flushing / Drain line connection

Docking station for dispense heads ACCESSORY

STANDARD VERSION

Product line	Material	Version	Collection Bottle	Flushing/ drain Connection	Item number	
QC2	PE	With shelf	0.5 l PE bottle	Flare 1/2"	RDC-89740	
	PE	Space saver	0.5 l PE bottle	Flare 1/2"	RDC-89740-S-1	
	CD elec. conductive	With shelf	0.5 l glass bottle	Flare 1/2"	RDC-89748	
	CD elec. conductive	Space saver	0.5 l glass bottle	Flare 1/2"	RDC-89740-CD	
QC3	PE	With shelf	0.5 l PE bottle	Flare 1/2"	RDC-89744	
	PE	Space saver	0.5 l PE bottle	Flare 1/2"	RDC-89743	
G-Series	PE	With shelf	0.5 l PE bottle	Flare 1/2"	RDC-89750	
	PE	Space saver	0.5 l PE bottle	Flare 1/2"	RDC-89750-S-1	
	CD elec. conductive	With shelf	0.5 l glass bottle	Flare 1/2"	RDC-89765	
	CD elec. conductive	Space saver	0.5 l glass bottle	Flare 1/2"	RDC-89754	

Note for dispense heads with limit switch:

If you are using a dispense head with a limit switch, it will not engage by default when screwed into the docking station. If you want the limit switch to engage, the following component must be ordered and inserted into the docking station:

QC2: RDC-25-ESR-QC2-PE
 G-Series: RDC-25-ESR-GH-PE

Over 1000 dip tubes.

For every container and virtually any length. Over 1000 standard variants. Optional bellows-type length compensator for virtually complete emptying. In addition, the dip tubes can be pre-installed in the containers by the chemical supplier or the container manufacturer. Safe, simple and clean.



SIMPLY CONFIGURE ONLINE!

Create your individual AS dispense heads with just a few clicks.




www.mydispensehead.com


Docking station for dispense heads ACCESSORY

DIMENSIONS

With storage shelf

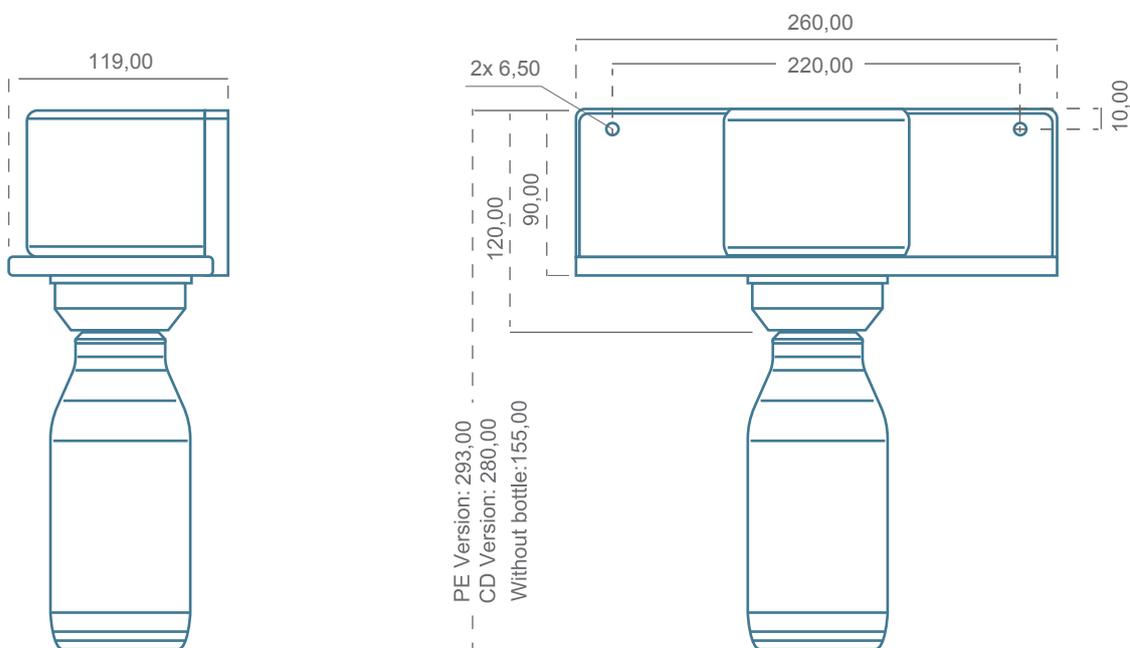

Space saver

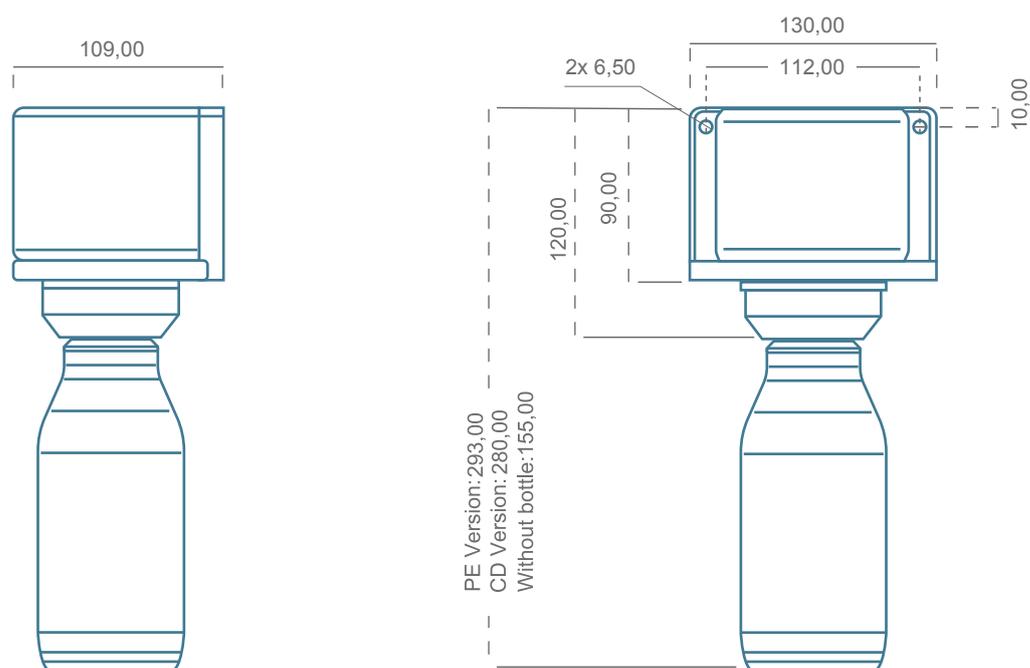

Docking station for dispense heads ACCESSORY

6 good reasons for the QC-System®:

- Clean delivery with preinstalled dip tube
- Safe connection with easy to use key code system that prevents chemical mix-ups
- Emission-free dispensing with integrated ventilation
- Drip-free disconnection
- High purity and chemically resistant materials
- Worldwide in use, well-known references



Chemical companies and end customers from a wide range of industries already rely on the AS products worldwide

Electronics Semiconductors
 Solar technology and photovoltaics
 Flat screens

Industry Electroplating
 Chemicals
 Printing/Paper
 Water treatment
 Automotive / mechanical engineering
 Adhesives
 Glass
 Agriculture

Pharmacy / Biotechnology / Cosmetics / Foods

Laboratories / Research facilities / Institutes

EUROPE – WORLDWIDE

AS Strömungstechnik GmbH
 Elly-Beinhorn-Str. 7
 73760 Ostfildern, Germany
 Tel.: +49 (0) 711 220 548-0
 Fax: +49 (0) 711 220 548-29
 info@asstroemungstechnik.de
 www.asstroemungstechnik.de

USA

A.S. Plastics Technology, Inc.
 644 Shrewsbury Commons
 Avenue #246
 Shrewsbury, PA 17361 USA
 Tel.: +1 (979) 232-2288
 sales@as-plastech.com
 www.as-plastech.com

ASIA – PACIFIC

DUSEMUND PTE LTD
 Dr. Claus Dusemund
 25 International Business Park
 #04 – 62 German Centre
 Singapore 609916
 Tel.: +65 6562 7871
 Fax: +65 6562 7872
 claus@dusemund.com
 www.dusemund.com



© AS Strömungstechnik GmbH 2025

QC® - an AS Strömungstechnik GmbH system. Made in Germany.
 www.asstroemungstechnik.de